


1-Zone Water Timer USER MANUAL

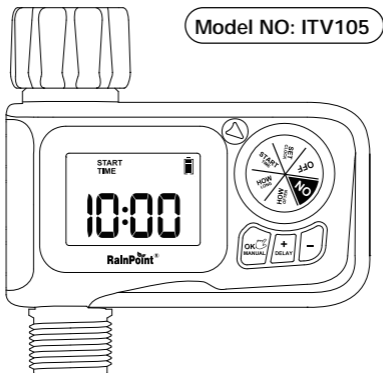

Email
service@rainpointonline.com



Free Hotline
US: +1 833-381-5659 (EN)
UK: +44 800-808-5337(EN)

DE: +49 800-182-0576 (DE,EN)

WARM TIPS

PLEASE READ BEFORE USING



Don't use the water timer when the temperature is below 37.4°F(3°C), and please store the timer indoors to avoid potential freezing damage.



The filter traps dirt particles, preventing them from entering the timer and causing clogging. Please clean the filter regularly and replace it if worn.



To ensure a longer lifespan, please use 2 new AA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.



Please activate the water timer before the first use or after a period of inactivity (Refer to page 6: **ACTIVATE THE TIMER BEFORE USE**).



Only use with clean cold water.

FOR ANY PROBLEMS DURING USE, PLEASE CONTACT US:



Web: www.rainpointonline.com



Email: service@rainpointonline.com



US toll free(English): +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free(Deutsch/English): +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free(English): +44 800-808-5337


(Mon-Fri: 9:00 AM-5:00 PM CET)

CONTENTS

PRODUCT OVERVIEW	01
AT A GLANCE	01
SPECIFICATION	02
PRODUCT INSTALLATION	03
INSTALLING THE BATTERIES	03
INSTALLING THE TIMER	04
ACTIVATE THE TIMER BEFORE USE	05
PROGRAMMING YOUR TIMER	06
ADDITIONAL FUNCTIONS	12
RAIN DELAY	12
MANUAL / HAND WATERING	13
OFF MODE	14
STOP RUNNING WATER	14
BATTERY STATUS	14
TROUBLESHOOTING	15
CLEANING YOUR TIMER	17
WARNINGS	18
WARRANTY	19
CUSTOMER SERVICE	19

PRODUCT OVERVIEW

AT A GLANCE

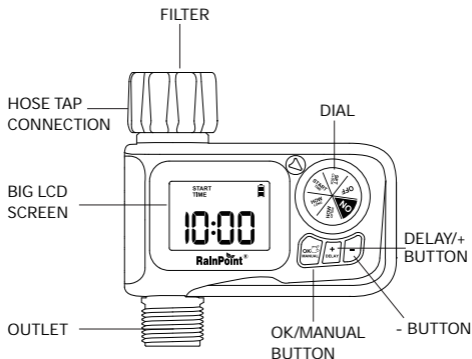

- **DIAL:** Rotate the dial to customize your watering schedule.
- **OK / MANUAL BUTTON:** Use "OK" to confirm the time. When the dial is turned to "ON", press and hold "MANUAL" to enter manual watering settings.
- **DELAY / + BUTTON :** Use "+" to adjust the time. When the dial is turned to "ON", press and hold "DELAY" to activate Rain Delay.
- **- BUTTON :** Use "-" to adjust the time.




DIAL POSITION	FUNCTION
SET CLOCK	Switch 12H/24H and set the current time
START TIME	Select what time you would like to start watering
HOW LONG	Determine how long to water (water duration)
HOW OFTEN	Choose how often you will water (water frequency)
ON	Timer runs according to your customized schedule
OFF	Turn off all watering

SPECIFICATION

Working Water Pressure	0.5bar-8bar (7.25 psi-116.03 psi)
Max Flow Rate	10 Gal/Min (35L/Min)
Waterproof Level	IP65
Working Temperature	37.4°F-122°F (3°C-50°C)
Watering Frequency	Every 1-12 hours or every 1-7 days
Watering Duration	From 1 minute to 3 hours 59 minutes (4 hours)
Water Inlet	NH (US) for 3/4" taps BSP(EU) for 3/4" or 1" taps
Water Outlet	For 3/4" standard garden hose
Power By	2 AA (1.5V) alkaline batteries (Not Included)


PRODUCT INSTALLATION

INSTALLING THE BATTERIES

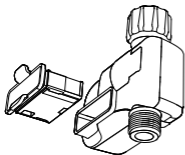


- 1) Remove the battery compartment to the back of the timer.
- 2) Insert 2 new AA (1.5V) alkaline batteries (not included).
- 3) Put the battery compartment back to the timer and press firmly to make sure it is completely sealed.



▲ Note:

- Install the battery tray securely after installing the battery to ensure waterproofing.
- When the timer is not used for a long time, please remove the batteries and dispose of them properly.
- Replace batteries when the low battery indicator  appears on display.
- Don't dispose of batteries in fire. Batteries may explode or leak.
- To ensure a longer lifespan, please use 2 new AA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.


INSTALLING THE TIMER

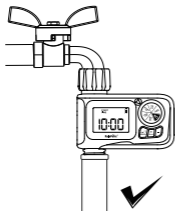

  - 1) Turn off the garden faucet.
- 2) Screw the timer to the garden faucet and make the display as vertical as possible to the ground to prevent rainwater from accumulating and leaking into the interior.
- 3) Screw the garden hose to the timer outlet.
- 4) Turn on the faucet after programming the timer.



Tips: If a leak occurs due to stripped threads or damaged chamfer at the faucet, wrap Teflon tape clockwise around the external threads (2-3 turns) until watertight.

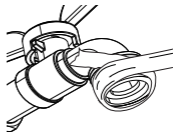

Note:


- ⊘ Please do not use tools, only install the timer by hand.
- ⊘ When freezing temperatures are expected, timers should be removed from the hose faucet and stored indoors to prevent potential freeze damage.
- ▲ Please install the filter properly and keep it clean as follows.



ACTIVATE THE TIMER BEFORE USE

⚠ Please activate the device before using it for the first time or after a period of inactivity.

Activation steps:

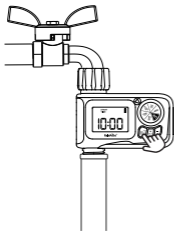

- 1) Keep the garden faucet turned off.
- 2) Turn the timer dial to "ON".
- 3) Press and hold the "MANUAL" button for 3-5s to enter Manual Watering Mode.
- 4) When the screen flashes, press the "OK" button to start manual watering.
- 5) After hearing the "click" sound or waiting for about 5 secs, the valve in the timer is opened, then turn the dial to "OFF" to close the valve.
- 6) Repeat step 2 - 5 for 3-5 times.
- 7) **Test:** Turn on the faucet a little bit, and then repeat step 2-5 to check if the water flow out or shut off as expected.

If yes, the timer valve is normal, please use it with confidence!
If not, please repeat the above steps several times or contact RAINPOINT support team immediately.

Note: When testing, please keep away from the water timer outlet to avoid being splashed and wet.

PROGRAMMING YOUR TIMER

 
STEP 1: SET CLOCK



- 1) Turn the dial to **SET CLOCK**.
- 2) Use "+" or "-" button to select 24-hour or 12-hour format and press "OK" button to confirm.
- 3) Use the "OK" button to confirm and switch between hours or minutes.
- 4) Turn the dial clockwise to save the changes in this STEP and go to next STEP.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 2: START TIME



- 1) Turn dial to **START TIME**.
- 2) Use the "+" and "-" buttons, to set the time you want to start watering, including AM and PM.
- 3) Use the "OK" button to switch time (Hours or Minutes).
- 4) Turn the dial clockwise to save the changes in this STEP and go to next STEP.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.


STEP 3: HOW LONG



- 1) Turn dial to **HOW LONG**.
- 2) Use the "+" and "-" buttons, to select watering duration from 1 minute to 3 hours 59 minutes.
- 3) Using the "OK" button to switch time (Hours or Minutes).
- 4) Turn the dial clockwise to save the changes in this STEP and go to next STEP.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 4: HOW OFTEN

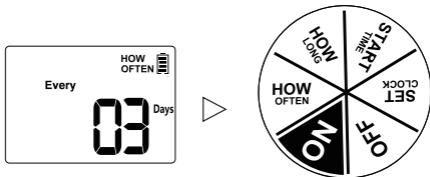

- 1) Turn the dial to **HOW OFTEN**.
- 2) Use "+" and "-" buttons, to set your watering frequency. You can choose to water every 1 to 12 hours, or every 1 to 7 days.
- 3) Turn the dial clockwise to save the changes in this STEP and go to next STEP.


Examples of watering frequency of every 1 day and every 3 days:



Tips:


- 1) When the setup of this **STEP** is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.
- 2) The minimum allowed value of **HOW OFTEN** must be greater than the duration set by **HOW LONG** in the previous step.

STEP 5: AUTOMATIC WATERING

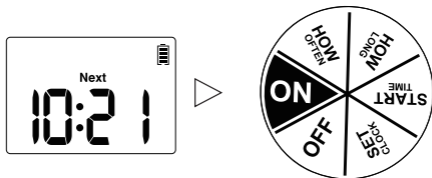

- 1) Turn dial to "ON".
- 2) The LCD screen will display the current time and the next time to start watering.

NOTE: The automatic watering program will only run when the dial is in the ON position.

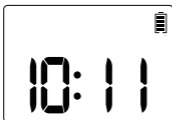

Current Time



Next Watering Start Time

CONGRATULATIONS!

Your timer has now been programmed successfully. It will **start watering automatically** based on the programmed start time, duration and frequency.

Now you can keep the faucet open and let the water timer automatically irrigate your yard.

NOTE:

- 1) Turning the dial and not in the **ON** state. It will stop all watering plans and will not start automatically. The automatic watering plans will only be executed when the dial is in the **ON** state.
- 2) Turn the dial and then back to **ON**.
 - If the current real-time time has exceeded the set **START TIME**, all watering plans for the day will be skipped, and the automatic watering program will start watering at the frequency you set from the **START TIME** of the next day.


Real-time (dial back to ON)	START TIME	HOW OFTEN	Next watering start time
1:00 PM	9:00 AM	6H	9 am the next day

- If the **START TIME** of the automatic watering plan of the day has not yet arrived, the watering plan will be executed normally from the **START TIME** of the day according to the frequency you set.


Real-time (dial back to ON)	START TIME	HOW OFTEN	Next watering start time
1:00 PM	3:00 PM	6H	3 p.m. that day

ADDITIONAL FUNCTIONS

 RAIN DELAY



Setting rain delay 24/48/72H

 

Performing rain delay

Rain delay allows you to postpone watering for a set period of time, and it will not interrupt your original schedule.

To access the rain delay, follow the steps below.

 
- 1) With the dial on "ON", press "DELAY" button for 3-5s to start the delay watering function.
- 2) There will be a delay period on the screen which default "24H". You can press button "+" or "-" to choose the delay period from 24H, 48H, and 72H.
- 3) Press "OK" button to run the delay function after selecting the delay time, and all watering plans will be skipped during this period.
- 4) To remove rain delay, hold the "DELAY" button for 3-5s again to resume your programmed watering schedule.

Note: Please remember to press the "OK" button after selecting the rain delay time to start the rain delay program. Otherwise, the rain delay setting will automatically exit after the screen flashes for 3-5s.

MANUAL / HAND WATERING




Setting manual watering
1min~8hrs



Performing manual watering

This function allows you to manually water without interrupting your set watering schedule.

To access this feature, please follow the steps below.

- 1) Turn the dial to "ON".
- 2) Press and hold the "MANUAL" button for 3-5s to enter the Manual Watering Mode.
- 3) Press the "+" or "-" buttons to adjust the manual watering time from 1 minute to 8 hours. (The default manual watering time is 10 minutes.)
- 4) After setting the watering time, press the "OK" button to start manual watering and the pattern  will be displayed on the screen.
- 5) If you need to stop the manual watering, please hold the "MANUAL" button for 3-5s to exit the manual watering mode and restore the original watering program.

Note: Please remember to press the "OK" button after setting the manual watering time to start manual watering. Otherwise, the manual watering setting will be automatically exited after the screen flashes for about 3-5s.

OFF MODE



- 1) If you wish to stop the watering plan for an extended period, turn the dial to "OFF". (Your settings are saved)
- 2) The timer will not water automatically while in OFF mode. (The screen will display the word OFF in large letters)
- 3) To start watering automatically again, turn the dial back to "ON" to resume your programmed watering schedule.

Tips: After turning it back to ON, please pay attention to the first watering time. Please refer to page 12 for details.

STOP RUNNING WATER

If the timer is watering and you want to stop it, please turn on and cancel **Manual Watering**. The current watering will be skipped, but subsequent watering schedules will not be affected. (See page 14 for details on Manual Watering settings)

BATTERY STATUS


Battery Status will be displayed as following:



Full



Low Power

Note: When the low battery indicator  appears on display, the valve will close automatically to avoid leakage. Please replace the battery in time in case of interrupting the normal operation.

TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
The water inlet leakage	<ol style="list-style-type: none"> 1. No filter or not be placed horizontally. 2. The faucet is not the standard 3/4". 	<ol style="list-style-type: none"> 1. Add a filter and make sure it's placed horizontally in the inlet. 2. Make sure the faucet is a standard 3/4" faucet. 3. Wrap Teflon tape on the tap making it tight.
The water won't stop/flow out	<ol style="list-style-type: none"> 1. Long time in storage and transportation make the valve inactive. 2. Valve blockage. 	<ol style="list-style-type: none"> 1. Keep the tap turned off and turn the timer dial to ON. 2. Run the manual watering for 5-7s and stop it. 3. Repeat the Step 2 for 3 to 5 times. 4. Try using it normally.
No response for manual/rain delay function	<ol style="list-style-type: none"> 1. After setting manual watering or rain delay time, without pressing OK button to save and run. 	<ol style="list-style-type: none"> 1. Press OK button again after the time is set to confirm.
Short battery life	<ol style="list-style-type: none"> 1. Mixed use of old and new batteries. 2. Use the carbon batteries or rechargeable batteries. 	<ol style="list-style-type: none"> 1. Use new alkaline batteries. 2. Rechargeable batteries and carbon batteries have a short life, use the alkaline batteries instead of them.

Low water pressure	<ol style="list-style-type: none"> 1. Filter blockage. 2. Inlet pressure not sufficient to support watering needs. 	<ol style="list-style-type: none"> 1. Check if the filter is clogged, if so, clean or replace the filter. 2. Make sure the timer is installed properly and not cross-threaded. 3. Installation of a booster pump or other auxiliary equipment of increasing pressure.
LCD screen does not display	<ol style="list-style-type: none"> 1. The battery is exhausted. 2. The display is exposed to direct sunlight. 	<ol style="list-style-type: none"> 1. Replace new 2*AA alkaline batteries and installed correctly. 2. Avoid direct sunlight, and observe if the battery is too low.

If you need help in using the timer, please feel free to contact us.

US toll free(English): +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free(Deutsch/English): +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free(English): +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)


Email: service@rainpointonline.com

CLEANING YOUR TIMER


After a period of use, impurities or dirt in the water may accumulate in the timer. Therefore, the timer should be cleaned regularly to ensure its proper operation.

Please follow these steps to clean the timer.

- 1) Turn off the garden faucet and remove the timer. Check whether the filter at the timer water inlet has accumulated impurities.
- 2) If the filter is dirty, please take it out of the timer and rinse it with running water.

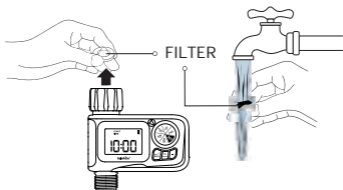

- 3) Turn on the Manual Watering Mode of the timer to open the valve and check whether the water pipe of the timer is blocked. If it is blocked, please clean it gently with a small cleaning brush.

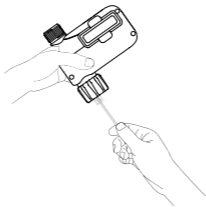

WARNINGS

- 1) For outdoor use only. Placing the timer in the sheltered outdoors will prolong its lifetime.
- 2) To avoid damage, please tighten it without using tools.
- 3) The filter should be placed horizontally in the water inlet to prevent leakage.
- 4) When low power, please replace the batteries to avoid the interruption of normal operation; when replacing the batteries, please make sure that the battery tray is dry.
- 5) When the timer is not in use, please remove the batteries and store it indoors.
- 6) Don't use the timer under the temperature more than 122°F (50°C), or less than 37.4°F(3°C).
- 7) Don't subject the product to extreme force and shock.
- 8) Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Never immerse the product in water.

WARRANTY

RainPoint provides a 1-year warranty against manufacturing defects in materials and workmanship from the date of purchase. During the warranty period, we'll replace free of charge the product found to be defective under reasonable use and service as determined solely by RainPoint.

To place a warranty request, please email us with your order ID at service@rainpointonline.com and we'll respond within 24 hours.

CUSTOMER SERVICE

Still have trouble with setup, please search for "**RainPoint**" on Youtube for installation videos!

If the user manual doesn't have what you're looking for or you need other help, please contact us before returning the product to the store and let us know the LOT NO. of your device.

LOT NO.: XXXXX

US toll free(English): +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free(Deutsch/English): +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free(English): +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)

Email: service@rainpointonline.com

EC REP

NAME: VIAJE ELECTRONIC COMPANY LIMITED

ADDRESS:

E588, 13 ADELAIDE ROAD, DUBLIN, D02 P950, IRELAND

EMAIL: VIAJEELE@outlook.com

UK REP

NAME: SUJE ELECTRONIC COMPANY LIMITED

ADDRESS:

S211 92a Bury Old Road, Manchester, England, M45 6TQ

EMAIL: SUJEELECTRONIC@outlook.com

Manufacturer/Hersteller/Fabricant/Produttore/Fabricante:

FUJIAN BALDR TECHNOLOGY CO.,LTD

ADDRESS/ADRESSE/ADRESSE/INDIRIZZO/DIRECCIÓN:

Floor 3, Building 2, No.71 Yangqi Road, Fuwan Industrial Area,
Cangshan District, Fuzhou, China. 350008

EMAIL: service@rainpointonline.com





Scan the QR code to
get fast support

Need Help?

Please contact us

US toll free: +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free: +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free: +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)

Email: service@rainpointonline.com

