


2-Zone Water Timer

USER MANUAL

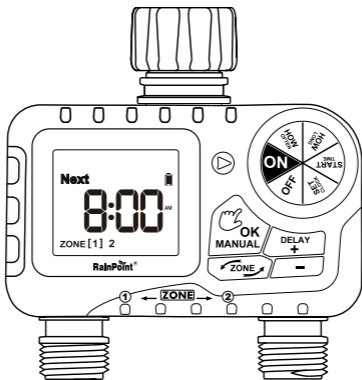

Model NO.: ITV205



Email
service@rainpointonline.com



Free Hotline
US: +1 833-381-5659 (EN) DE: +49 800-182-0576 (DE, EN)
UK: +44 800-808-5337(EN)

WARM TIPS

PLEASE READ BEFORE USING



Don't use the water timer when the temperature is below 37.4°F (3°C), and please store the timer indoors to avoid potential freezing damage.



The filter traps dirt particles, preventing them from entering the timer and causing clogging. Please clean the filter regularly and replace it if worn.



To ensure a longer lifespan, please use 2 new AA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.




Please activate the water timer before first use or after a period of inactivity (Refer to page 6: ACTIVATE THE TIMER BEFORE USE).



Only use with clean cold water.

FOR ANY PROBLEMS DURING USE, PLEASE GET SUPPORT FROM US:

 Web: www.rainpointonline.com

 Email: service@rainpointonline.com

 US toll free(English): +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free(Deutsch/English): +49 800-182-0576


(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free(English): +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)

PRODUCT OVERVIEW

AT A GLANCE

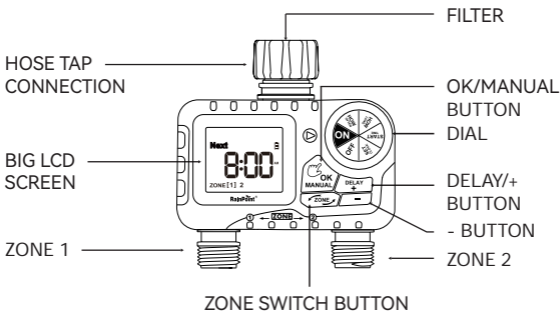

DIAL: The dial to customize your watering schedule; Save changes (settings).

ZONE SWITCH BUTTON: Switch between ZONE 1 and ZONE 2.

OK/ MANUAL BUTTON: Confirm to go to next/previous step or manual watering mode.

DELAY/+ BUTTON: Adjust time and system setup or delay watering program.

- BUTTON: Adjust time and system setup.



DIAL POSITION	FUNCTION
SET CLOCK	Switch 12H/24H and set the current time
START TIME	Set the first irrigation start time for each zone
HOW LONG	Determine how long to water for each zone
HOW OFTEN	Choose how often you will water for each zone




DIAL POSITION	FUNCTION
ON	Timer waters according to your customized schedule for both zones
OFF	Turn off all watering

SPECIFICATION

Working Water Pressure	0.5 bar-8 bar (7 psi-116 psi)
Max Flow Rate	10 Gal/Min (35L/Min)
Waterproof Level	IP65
Working Temperature	37.4°F-122°F (3°C-50°C)
Working Voltage	DC2.3V~DC3.3V
Watering Frequency	Every 1-12 hours or Every 1-7 days
Watering Duration	From 1 minute to 3 hours 59 minutes (4 hours)
Water Inlet	NH (US) for 3/4" taps BSP(EU) for 3/4 or 1" taps
Water Outlet	For 3/4" standard garden hose
Time Format	12H or 24H
Power By	2 AA alkaline batteries (Not included)


PRODUCT INSTALLATION

INSTALLING THE BATTERIES

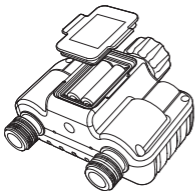


- 1) Remove the battery compartment cover on the back of the timer.
- 2) Insert 2 new AA (1.5V) alkaline batteries (not included).
- 3) Put the battery compartment cover back on the timer and press firmly to make sure it is completely sealed.



▲ Note:

- Firmly restore the battery compartment cover to ensure water resistance.
- When the timer is not used for a long time, please remove the batteries and dispose of them properly.
- Replace batteries when the low battery indicator  appears on display.
- Don't dispose of batteries in fire. Batteries may explode or leak.
- To ensure a longer lifespan, please use 2 new AA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc) or rechargeable batteries.

INSTALLING THE TIMER

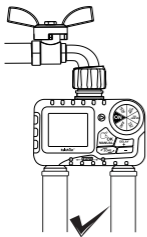


  - 1) Turn off the garden faucet.
- 2) Wrap Teflon Tape around the faucet threads.
- 3) Screw the timer to the garden faucet and make the display is as vertical as possible to the ground to prevent rainwater from accumulating and leaking into the interior.
- 4) Wrap Teflon Tape around the threads of the timer outlets.
- 5) Screw the garden hoses to the timer outlets.
- 6) Turn on the faucet after programming the timer.



Tips:

 - 1) Wrap Teflon tape around the threads and align the threads for installation to avoid thread wear and leakage.
- 2) If the faucet threads cannot tighten to the bottom of the timer inlet, add a rubber washer to create an end seal to prevent leaks.



Rubber Washer




- ⊗ Please do not use tools, only install the timer by hand.
- ⊗ When freezing temperatures are expected, timers should be removed from the hose faucet and stored indoors to prevent potential freeze damage.
- ▲ Please install the filter properly and keep it clean as follows.



ACTIVATE THE TIMER BEFORE USE

▲ Please activate the device before use it for the first time or after a period of inactivity.

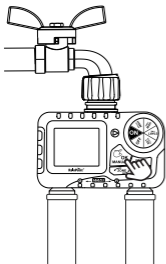

- 1) Keep the garden faucet turned off.
- 2) Turn the timer dial to "ON".
- 3) Press and hold the "MANUAL" button for 3-5s to enter Manual Watering Mode.
- 4) Press the "ZONE" button twice to select both Zone 1 and Zone 2. When the screen flashes, immediately press the "OK" button to start manual watering.
- 5) After hearing 2 "click" sounds or waiting for about 5 secs, the valves in the timer are opened, and then turn the dial to "OFF" to close the valves.
- 6) Repeat the step 2-5 for 3-5 times.
- 7) Test: Turn on the faucet a little bit, and then repeat the step 2-5 to check if the water flow out or shut off as expected.

If yes, the timer valves are normal, please use it with confidence!
 If not, please repeat the step 2-5 several times or contact RAINPOINT support team immediately.

Note: When testing, please keep away from the water timer outlet to avoid being splashed and wet.

PROGRAMMING THE TIMER

STEP 0: UNDERSTANDING ZONES

This is a two-zone timer that allows you to water two different areas from the same faucet. Each zone can be programmed with independent start time, duration and frequency.

⚠ Note: Dual zones operating simultaneously have lower water pressure than single zone because the water pressure is divided between the two zones.

Please design the program for each ZONE separately.

- 1) Keep ZONE 1 and complete the settings, following the steps 1-4 below. Then turn the dial to "ON" to save the changes.
- 2) Press "ZONE" button to select ZONE 2, and follow steps 2-4 to set up. Turn the dial to "ON" to save all the plans.


STEP 1: SET CLOCK



- 1) Turn the dial to "SET CLOCK". Use "+" or "-" button to select 24-hour or 12-hour format and press "OK" button to confirm.
- 2) Use "+" or "-" button to set the current exact time. If you choose the 12-hour format, please note the AM and PM.
- 3) Use the "OK" button to confirm and switch between hours or minutes.
- 4) Turn the dial clockwise to save the changes in this STEP and go to the next STEP.

TIPS: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.


STEP 2: START TIME

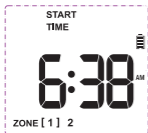

- 1) Turn dial to "START TIME".
- 2) Use "+" and "-" buttons to set your start time.
- 3) Use "OK" button to switch time (Hours or Minutes).
- 4) Turn the dial clockwise to save the changes in this STEP and go to the next STEP.

TIPS: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.


STEP 3: HOW LONG

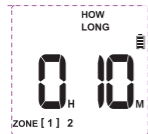

- 1) Turn dial to "HOW LONG".
- 2) Use "+" and "-" buttons to select watering duration, from 1 minute to 3 hours 59 minutes.
- 3) Use "OK" button to switch to (Hours or Minutes).
- 4) Turn the dial clockwise to save the changes in this STEP and go to the next STEP.

TIPS: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 4: HOW OFTEN

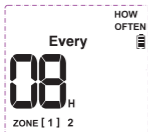

HOW OFTEN



- 1) Turn dial to "HOW OFTEN".
- 2) Use "+" and "-" buttons, to set your watering frequency. You can choose to water every 1 to 12 hours, or every 1 to 7 days. (NOTE: 1 is every day, 2 is every other day, etc.)
- 3) Turn the dial clockwise to save the changes in this STEP and go to the next STEP.

TIPS: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

Examples of watering frequency of every 1 day, every 2 days and every 3 days:

EVERY 1 DAY

	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
EVERY WEEK	●	●	●	●	●	●	●

EVERY 2 DAY

	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
WEEK ONE		●		●		●	
WEEK TWO	●		●		●		●

EVERY 3 DAY

	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
WEEK ONE		●			●		
WEEK TWO	●			●			●

STEP 5: AUTOMATIC WATERING



- 1) Turn dial to "ON".
- 2) The LCD screen will display the current time and the next watering start time in Zone 1, and then display the current time and the next watering start time in Zone 2.

NOTE: The automatic watering program will only run when the dial is in the ON position.



Current time



Next watering
start time in Zone 1



Current time



Next watering
start time in Zone 2

CONGRATULATIONS! Your timer has now been programmed successfully! It will automatically start watering based on the programmed start time, duration and frequency.

Now you can keep the faucet open and trust the timer to water!

NOTE:

- 1) Turning the dial and not in the **ON** state. It will stop all watering plans and will not start automatically. The automatic watering plans will only be executed when the dial is in the **ON** state.
- 2) Turn the dial and then back to **ON**.
 - If the current real-time time has exceeded the set **START TIME**, all watering plans for the day will be skipped, and the automatic watering program will start watering at the frequency you set from the **START TIME** of the next day.

Real-time (dial back to ON)	START TIME	HOW OFTEN	Next watering start time
1:00 PM	9:00 AM	6H	9 am the next day

- If the **START TIME** of the automatic watering plan of the day has not yet arrived, the watering plan will be executed normally from the **START TIME** of the day according to the frequency you set.

Real-time (dial back to ON)	START TIME	HOW OFTEN	Next watering start time
1:00 PM	3:00 PM	6H	3 pm the that day

ADDITIONAL FUNCTIONS

RAIN DELAY MODE



Turn the dial to "ON",
press and hold the
"DELAY" button



Press the "+" or "-"
button to adjust the
delay watering time



Press the "OK"
button to start
rain delay

Rain delay allows you to postpone watering on both zones for a set period of time without interrupting your set watering schedule. To access the rain delay, follow the steps below.

- 1) When the dial in the "ON" position, press and hold the "DELAY" button for 3-5s to enter the delay mode.
- 2) In Delay Mode, you can find the option "24H" flashing on the screen. Press "+" and "-" to select delay period of 24H, 48H and 72H.
- 3) Press "OK" button to run the delay function, then the screen will show a countdown of the remaining delay.
- 4) To cancel rain delay, hold the "DELAY" button for 3-5s again to resume your programmed watering schedule.

Note:

Please remember to press the "OK" button after selecting the rain delay time to start the rain delay program. **Otherwise, the rain delay setting will automatically exit after the screen flashes for 3-5s.**

MANUAL/HAND WATERING



Turn the dial to "ON", press and hold the "MANUAL" button

 
Press the "ZONE" button to select the zone to be watered

Press the "+" or "-" button to adjust the manual watering time


Press the "OK" button to start manual watering

This function allows you to manually water without interrupting your set watering schedule. To access this feature, please follow the steps below.


- 1) Turn the dial to "ON".
- 2) Press and hold the "MANUAL" button for 3-5s to enter the Manual Watering Mode.
- 3) Press the "ZONE" button to select which zone you want to use.




Zone 1 only

 

Zone 2 only

 


Zone 1 and Zone 2

- 4) Use the "+" or "-" button to adjust the manual watering time from 1 minute to 8 hours. (Press and hold the "+" or "-" button to quickly increase or decrease the time.)
- 5) Press the "OK" button immediately when the screen flashes to confirm and start the manual watering. The screen will show the pattern  and the remaining time for manual watering.
- 6) To stop the manual watering, hold the "MANUAL" button for 3-5s to exit the manual watering mode and restore the original watering program.

NOTE: Please remember to press the "OK" button after setting the manual watering time to start manual watering. **Otherwise, the manual watering setting will be automatically exited after the screen flashes for about 3-5s.**

USE ONLY ONE OF THE ZONES

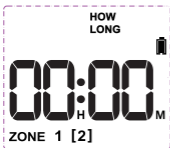

If you want to use only ZONE 1 and close ZONE 2, please set it up as follows.

- 1) Turn the dial to "HOW LONG" and press "ZONE" to select ZONE 2.
- 2) Press the "+" or "-" button to adjust the Hour until the screen displays "00:00".
- 3) Turn the dial to "ON" to save the changes. It means ZONE 2 is off and you can select ZONE 1 to program schedule as needed and then the timer will only run ZONE 1.

If you only want to use ZONE 2 and close ZONE 1, the same applies.

OFF MODE



- 1) If you wish to stop all watering plan for an extended period, turn the dial to "OFF". (Your settings are saved)
- 2) The timer will not water automatically while in OFF mode. (The screen will display the word OFF in large letters)
- 3) To start watering automatically again, turn the dial back to "ON" to resume your programmed watering schedule.

Tips: After turning it back to ON, please pay attention to the first watering time. Please refer to page 11 for details.

STOP RUNNING WATER

If the timer is watering and you want to stop it, please turn on and cancel **Manual Watering**. The current watering will be skipped, but subsequent watering schedules will not be affected. (See page 13 for details on Manual Watering settings)

BATTERY STATUS

Battery Status will be displayed as following:



Full



Low Power

Note: When the low battery indicator appears, the valve will close automatically to avoid leakage. Please replace the battery to recovery.

TROUBLESHOOTING

Issue	Possible Cause	Advice
The water inlet leakage	<ol style="list-style-type: none"> 1) No filter or not be placed horizontally. 2) The faucet is not the Right standard 3/4" . 	<ol style="list-style-type: none"> 1) Add filter and make sure it' s placed horizontally in the inlet. 2) Make sure the faucet is a 3/4" faucet. 3) Strengthen it with Seal tape.
The water doesn't stop/ flow out	<ol style="list-style-type: none"> 1) Long-term storage and transportation make the valve inactive. 2) Valve blockage. 	<ol style="list-style-type: none"> 1) Keep the tap turned off and turn the timer dial to ON. 2) Select the zone you want to fix (ZONE 1 or ZONE 2) and run manual watering for 3-5s and stop it. 3) Repeat the Step 2 for 5 to 7 times. 4) Try using it normally.
Dial or button problems	<ol style="list-style-type: none"> 1) The dial/valve is stuck. 2) Accidentally holding the OK button while inserts the batteries. 	<ol style="list-style-type: none"> 1) Same procedure as above. 2) Turn the dial to the OFF to check if the valve can be closed.

Issue	Possible Cause	Advice
Short battery life	<ol style="list-style-type: none"> 1) Mixed use of old and new batteries. 2) Used the carbon batteries or rechargeable batteries. 	<ol style="list-style-type: none"> 1) Use brand new alkaline batteries. 2) Rechargeable batteries and carbon batteries have a short and unstable battery life, please use the alkaline batteries instead of them.
Low water pressure	<ol style="list-style-type: none"> 1) Filter blockage. 2) Inlet pressure not sufficient to support watering. 	<ol style="list-style-type: none"> 1) Check if the filter is clogged, if so, clean or replace the filter. 2) Make sure the timer is installed properly and not cross-threaded. 3) Installation of a booster pump or other auxiliary equipment of increasing pressure.
The timer does not water	<ol style="list-style-type: none"> 1) The dial turn to OFF position. 2) The faucet is not turned on. 3) The battery is dead, it shuts down automatically. 4) Rain delay is ON. 	<ol style="list-style-type: none"> 1) Rotate the dial to ON position. 2) After finishing all settings turn on the faucet. 3) Replace with new alkaline batteries. 4) Waiting for the plan to resume again.

Issue	Possible Cause	Advice
LCD display became blank	<ol style="list-style-type: none"><li data-bbox="298 135 594 251">1) The LCD temporarily does not display under long-term exposure.<li data-bbox="298 251 584 343">2) The battery is dead, it shuts down automatically.	<ol style="list-style-type: none"><li data-bbox="632 135 909 222">1) Avoid long-term exposure under the sunlight.<li data-bbox="632 222 888 281">2) Replace with new alkaline batteries.

If you have further questions, please visit the following link:

Email: service@rainpointonline.com

US toll free: +1 833-381-5659(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free: +49 800-182-0576(Mon-Fri: 9:00 AM-5:00 PM CET)


UK toll free: +44 800-808-5337(Mon-Fri: 9:00 AM-5:00 PM CET)

CLEANING YOUR TIMER


After a period of use, impurities or dirt in the water may accumulate in the timer. Therefore, the timer should be cleaned regularly to ensure its proper operation.

Please follow these steps to clean the timer.

- 1) Turn off the garden faucet and remove the timer. Check whether the filter at the timer water inlet has accumulated impurities.
- 2) If the filter is dirty, please take it out of the timer and rinse it with running water.

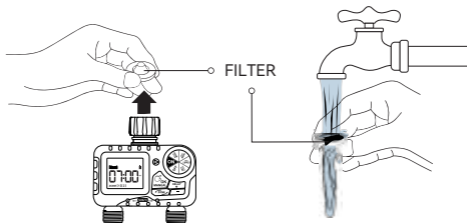

- 3) Turn on the Manual Watering Mode of the timer to open the valve and check whether the water pipe of the timer is blocked. If it is blocked, please clean it gently with a small cleaning brush.

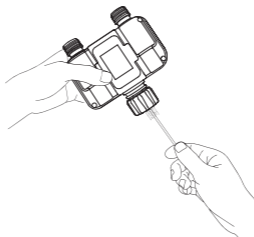

WARNINGS

- 1) For outdoor use only. Placing the timer in the sheltered outdoors will prolong its lifetime.
- 2) To avoid damage, please tighten it without using tools.
- 3) The filter should be placed horizontally in the water inlet to prevent leakage.
- 4) When low power, please replace the batteries to avoid the interruption of normal operation; when replacing the batteries, please make sure that the battery tray is dry.
- 5) When the timer is not in use, please remove the batteries and store it indoors.
- 6) Don't use the timer under the temperature more than 122°F (50°C), or less than 37.4°F (3°C).
- 7) Don't subject the product to extreme force and shock.
- 8) Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Never immerse the product in water.

This product conforms to the national standards of the United States, Britain, Germany and France. Please use this product correctly. If it needs to be discarded, please properly dispose according to the national requirements. Please protect the environment.

WARRANTY

RainPoint provides a 1-year warranty against manufacturing defects in materials and workmanship from the date of purchase. During the warranty period, we'll replace free of charge the product found to be defective under reasonable use and service as determined solely by RainPoint.

To place a warranty request, please email us with your order ID at service@rainpointonline.com and we will respond within 24 hours.

CUSTOMER SERVICE

Still have trouble with setup, please search for "RainPoint" on YouTube for installation videos!

If the user manual doesn't have what you're looking for or you need other help, please contact us before returning the product to the store and let us know the LOT NO. of your device.

Email: service@rainpointonline.com

US toll free(English): +1 833-381-5659

(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free(Deutsch/English): +49 800-182-0576

(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free(English): +44 800-808-5337

(Mon-Fri: 9:00 AM-5:00 PM CET)

EC REP

NAME: VIAJE ELECTRONIC COMPANY LIMITED

ADDRESS: E588, 13 ADELAIDE ROAD, DUBLIN, D02 P950, IRELAND

Email: VIAJEELE@outlook.com

UK REP

NAME: SUJE ELECTRONIC COMPANY LIMITED

ADDRESS: S211 92a Bury Old Road, Manchester, England, M45 6TQ

EMAIL: SUJEELECTRONIC@outlook.com

Manufacturer/Hersteller/Fabricant/Fabricant/Fabricante:

FUJIAN BALDR TECHNOLOGY CO.,LTD

ADDRESS/DIRECCIÓN: Floor 3, Building 2, No.71 Yangqi Road, Fuwan Industrial Area Cangshan District, Fuzhou, China. 350008

EMAIL: service@rainpointonline.com



ÉLÉMENTS D'EMBALLAGE
À SÉPARER ET À DÉPOSER
DANS LE BAC DE TRI



Cet appareil
se recycle

À DÉPOSER
EN MAGASIN

À DÉPOSER
EN DÉCHÈTERIE



OU



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



Made in China



Not included.





Scan the QR code to
get fast support

Need Help?

Please contact us

US toll free: +1 833-381-5659
(Mon-Fri: 9:30 AM-5:30 PM PST)

DE toll free: +49 800-182-0576
(Mon-Fri: 9:00 AM-5:00 PM CET)

UK toll free: +44 800-808-5337
(Mon-Fri: 9:00 AM-5:00 PM CET)

Email: service@rainpointonline.com

